



FLOOD CONTROL DISTRICT  
of  
MARICOPA COUNTY

Property of  
Flood Control District of MC Library  
Please Return to  
2801 W. Durango  
Phoenix, AZ 85009

# Drainage Design Management System

---

## User's Manual


---




KVL Consultants, Inc.

**Drainage Design Management System for Windows, Version 1.5**  
**Installation Instructions**

- 1) Insert the DDMSW CD in the CD drive (here denoted as X:). The CD contains an autorun file and installation should begin automatically. If not, from the Start menu, type X:\DDMSW\Setup at the RUN command (substitute your CD drive letter for X).
- 2) Follow the instructions on the screen. Once installation has finished, start the program by double-clicking on the DDMSW icon. You will receive the following message:

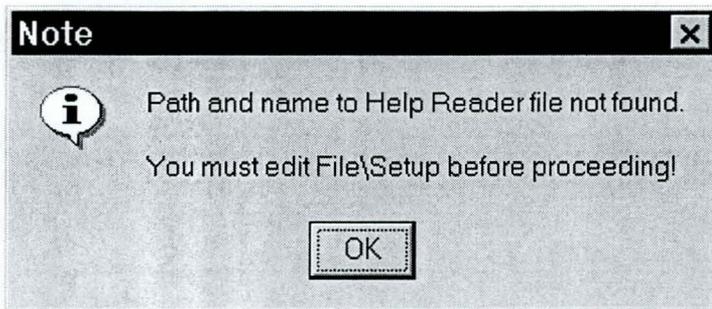



- 3) Click OK.
- 4) Next, you will see the following screen:

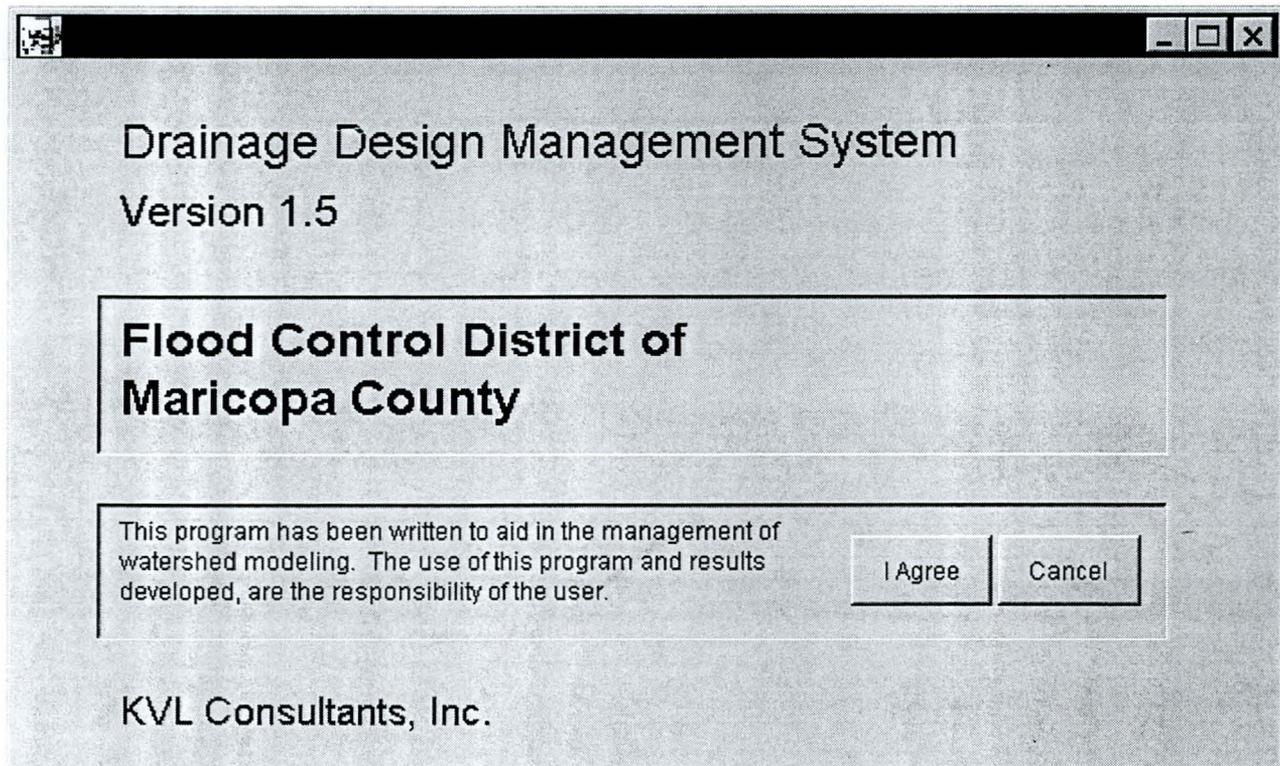


- 5) Click "I Agree".

6) Next, you will see the following screen:

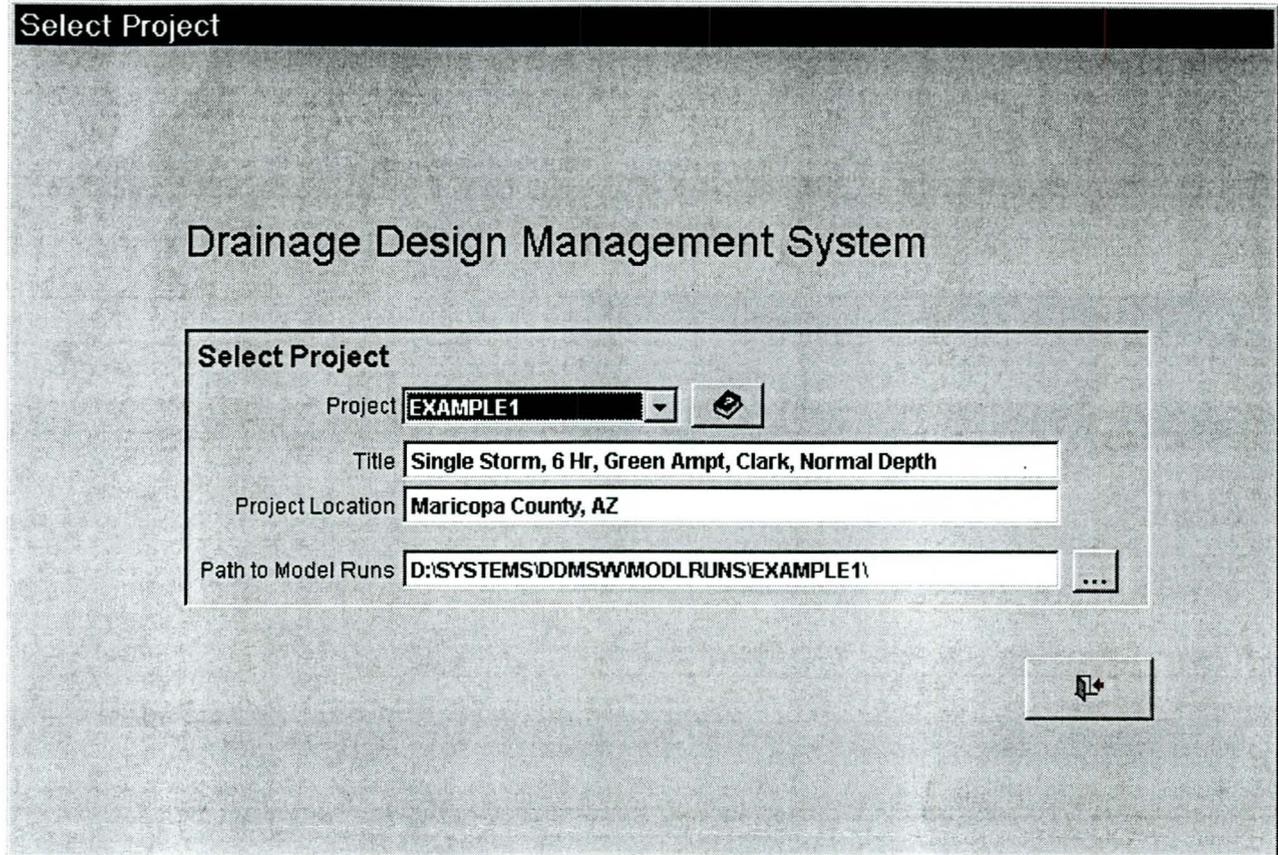

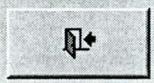
7) Click the Exit  button.

8) Next, you will see the following screen:

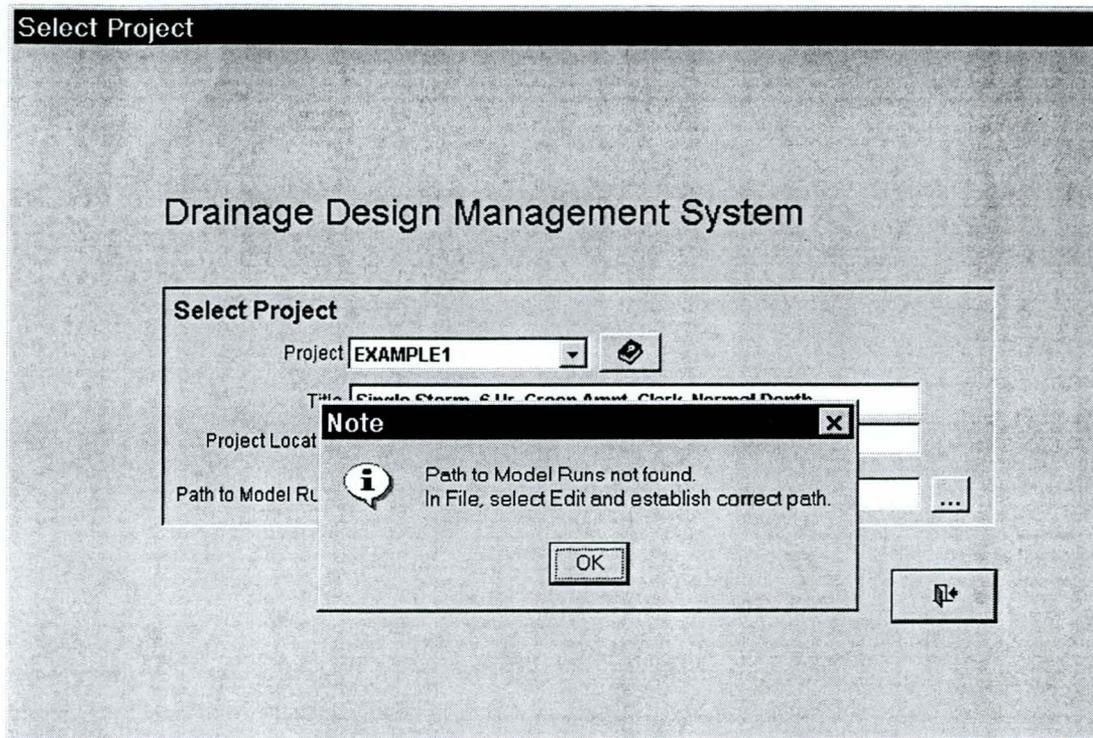

9) Click OK.

10) From the pulldown menus at the top of the main DDMSW screen, choose FILE | SETUP. You should see the following screen:

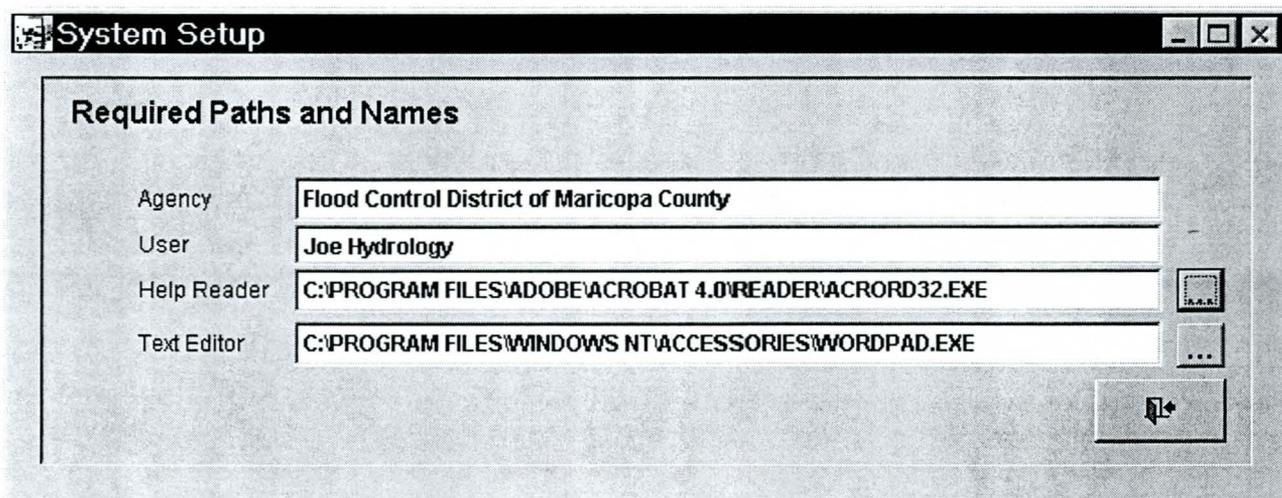

11) To use the DDMSW help files, you must have Adobe Acrobat installed on your system. Included in the DDMSW installation is the setup file for Adobe Acrobat 4.0, or you access the free download from [www.adobe.com](http://www.adobe.com).

- 12) **If you do not have the Adobe Acrobat Reader**, you can use the installation file that was included in the setup. Go to C:\DDMSW\ADOBE\ and run the setup file "rs40eng.exe" Once Acrobat is installed, type C:\PROGRAM FILES\ADOBE\ACROBAT 4.0\READER\ACRORD32.EXE in the Help Reader block, as shown in the above screenshot. Note: The exact path may differ from what is shown. If so, type in the correct path, or use the Browse option (the button with three dots) to find the correct path.
- 13) **If you already have Adobe Acrobat Reader installed on your system**, type in the correct file path in the "Help Reader" block, or use the Browse option (the button with three dots) to find the correct path.
- 14) Similarly, you must also define which text editor DDMSW should use (usually NotePad or WordPad) by typing the correct file path in the "Text Editor" block, or using the Browse button to locate the correct file. See above screenshot for example of using WordPad under Windows NT.
- 15) For detailed instructions on using the program, please see the User's Manual, which can be accessed through the HELP pull-down menu, or opened directly from C:\DDMSW\HELP\MANUAL.PDF.

# Table of Contents

<b>1. Introduction</b>	
System Overview .....	1-1
Basic Database Terminology .....	1-1
Program Installation .....	1-2
DDMSW .....	1-2
Acrobat Reader .....	1-2
Starting the Software.....	1-3
<b>2. General Features</b>	
Main Menu .....	2-1
Standard Buttons .....	2-1
Edit Menu .....	2-3
Forms .....	2-3
<b>3. File</b>	
New .....	3-1
Open .....	3-2
Edit .....	3-2
Management .....	3-3
Setup .....	3-5
<b>4. Hydrology</b>	
Rainfall .....	4-1
Prefre .....	4-1
Rainfall Pattern .....	4-1
6 Hour Distribution Defaults.....	4-2
IDF Parameters .....	4-2
Soils.....	4-2
Data .....	4-2
Defaults.....	4-3
Soil Surveys.....	4-3
Land Use.....	4-4
Data .....	4-4
Defaults.....	4-4
Basins .....	4-5
Major Basins .....	4-5
Sub Basins.....	4-5
Routing .....	4-6
Distributions .....	4-7
Time-Area.....	4-7
S-Graph .....	4-7
HEC-1 .....	4-8
Run HEC-1 .....	4-8
Edit HEC-1 Data .....	4-9
View Summary Results.....	4-9
View Output File .....	4-10
Develop Draft Model Data .....	4-10
<b>5. Hydraulics</b>	
To be developed	

## Table of Contents (Cont'd)

<b>6. GIS</b>	
To be developed	
<b>7. Utilities</b>	
Export Data .....	7-1
Import Data .....	7-2
Pack Tables .....	7-3
Table Descriptions .....	7-3
Field Descriptions.....	7-3
Import DOS Family.....	7-4
<b>8. Help and Window</b>	
Help .....	8-1
Window .....	8-1
<b>Example</b>	
HEC-1 model .....	Ex-1

# 1. Introduction

---

## System Overview

The Drainage Design Management System for Windows (DDMSW) has been written to facilitate data management and computational procedures required for drainage analysis in Maricopa County. This manual serves as a guide in the use of the program and is intended to be used in conjunction with the County's Drainage Design Manuals.

The program is written in Microsoft Visual FoxPro and currently includes modules for File Management, Hydrology and Utilities. Future versions will include modules for Hydraulics and GIS (Geographic Information System) integration.

Unlike the former DDMS which was DOS based and stored data in separate ASCII files, DDMSW is a relational Database that manages multiple projects from on single location. DDMSW is a multi-tasking window based application which enables the user to open several 'windows' simultaneously. New features include pull-down menus, user-friendly forms which the user can arrange on the desktop, and windows editing tools to facilitate data entry. DDMSW utilizes a relational Database that includes Tables for data entry and editing. Each Table appears as a separate '.dbf' file on disk. The Tables are related to each other based on the key field 'Project Id' which is established when starting a new project. Running models is automated from a menu and the data for running the models is extracted from the various Tables in the Database.

## Basic Database Terminology

The application stores data (values) in a relational Database. This data is organized into *tables*, *fields*, and *records* to make it more meaningful. For example, 01 by itself is meaningless. However, in a table called 'Basins', in a field called 'BasinID', in a record corresponding to 'KVLTEST1', we now understand that 01 is a major basin in project KVLTEST1.

A *table* is a grouping of data. The data is dynamic because it can be modified, deleted, added to, and so on. Here is an example of a table:

Table: Basins

<u>ProjectID</u>	<u>BasinID</u>	<u>Description</u>	<u>Sort</u>
KVLTEST1	01	Major Basin 01	10
KVLTEST1	02	Major Basin 02	20

A table is composed of one or more *fields*. In the example, the fields are ProjectID, BasinID, Description, and Sort. Fields are similar to columns in a spreadsheet. All fields in a table have the same format (eg. text of maximum 70 characters, numeric 12 places with 2 decimals) and they share the same characteristics (eg. they are different descriptions).

A table also consists of one or more *records*. Records are similar to rows in a spreadsheet. In the example, "KVLTEST1, 01, Major Basin 01, 10' compose one record in the table 'Basins'. The example shows a total of two records and four fields.

In DDMSW, the Database is composed of numerous tables which organize and store information. These tables are linked by one common *key field*, **projectid** which identifies the project the records are associated with.

## Program Installation

### DDMSW

The software used in DDMSW includes:

DDMSW	Compiled application
HEC-1	Most recent HEC-1 with modifications
Prefre	Rainfall model
MCUHP1	County's DOS program
MCUHP2	County's DOS program
Rational	County's DOS program
WordPad	Text editor

All required software for DDMSW is contained on the CD provided with this application.

Insert the DDMSW CD in the CD drive (here denoted as X). Run X:\DDMSW\Setup from the RUN command (substitute your CD drive letter for X). Follow the instructions on the screen.

The user can choose the program's location, but assuming C:\DDMSW, the following directory structure will be created:

C:\DDMSW	Program files
C:\DDMSW\Adobe	Adobe Acrobat installation files
C:\DDMSW\Backup	Directory for archiving data
C:\DDMSW\Data	Data Files
C:\DDMSW\Help	Help files
C:\DDMSW\ModelRuns	Default directory for model runs
C:\DDMSW\Models	Model programs
C:\DDMSW\Reports	Reports

The procedure will notify the user when the DDMSW installation is complete.


### Adobe Acrobat Reader

This manual and all help files require Adobe Acrobat Reader to view and print the files. If Adobe Acrobat Reader is not currently installed on your computer, then it will be necessary to install the program. The latest version can be downloaded from Adobe's website at [WWW.Adobe.Com](http://WWW.Adobe.Com). Follow their instructions to download 'Acrobat Reader'. Alternatively, a copy has been included in the Adobe sub directory of this installation. Double click on the program file and follow the instructions on the screen.

## Starting the Software

DDMSW is started by running 'DDMSW.exe'. The program can be accessed from the Windows Startup menu or other selected folder or by double-clicking on the icon.

When the software is first started, it is necessary to edit File\Setup to establish system settings.

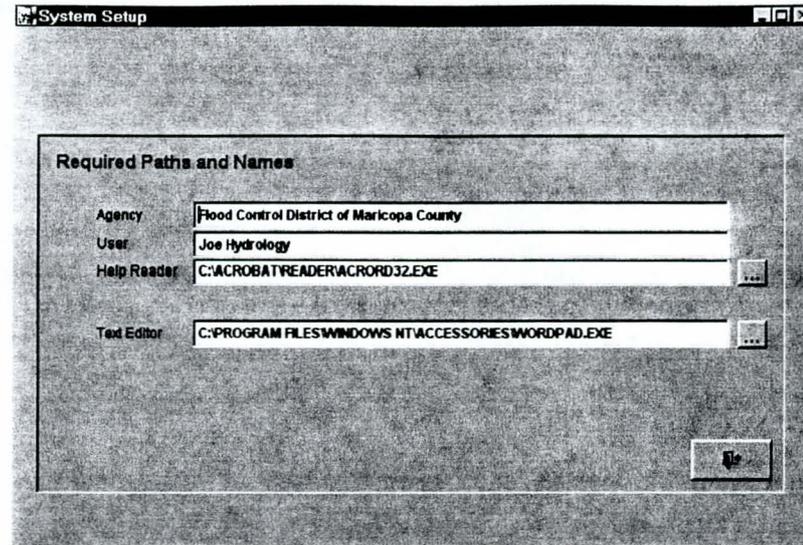

## 2. General Features

### Main Menu



The Main Menu is the center of the application. This is the screen which is displayed when the user starts the application. This is also the screen the user is always returned to after closing a submenu or form.

Specific actions can be accessed through the pull-down menus shown on the Main Menu bar. This manual will explain the functions available on each menu and will describe the individual elements shown on data entry screens.

### Standard Buttons

There is a toolbar of standard buttons, which is identical on each data entry screen.



Goes to the first record in the table.



Moves to the previous record.




Moves to the next record.



Goes to the last record in the table.




Locates records based on a specified search criterion. Highlight the field to search and type the search expression.

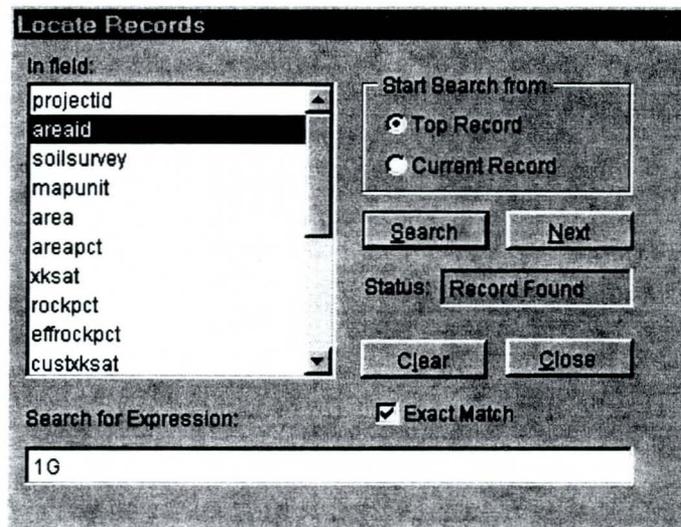




Selects a subset of records according to user specifications. A *filter* consists of one or more conditions which compares a field to a value using an *operator*. Multiple conditions can be combined together with a *connector*. To create a filter, select the 'Add' button. The following 'Filter Condition' dialog box appears.

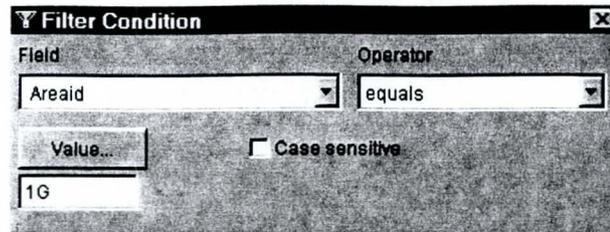

Select a field and an operator, enter a value and click 'OK'. (For alphanumeric fields, select a value from the pull down list).

On the 'Filter' dialog box, the user has the following options:

- i) Click 'OK' to execute the filter and view the subset of records.
- ii) Select 'Add' again to add other condition to the filter.
- iii) Select 'Store' to save the filter for future use. This is useful for commonly used filters.

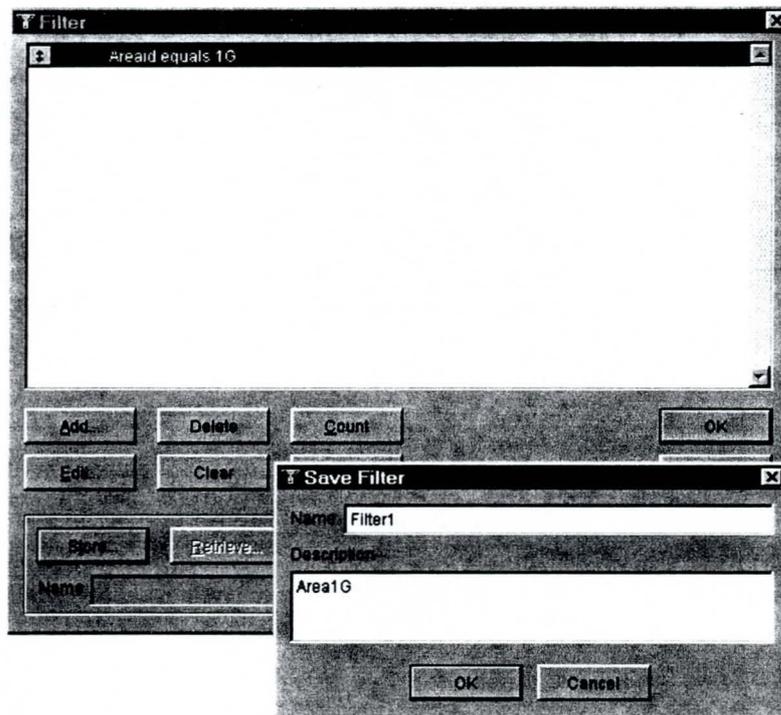

To use a previously saved filter, select 'Retrieve'. Highlight the filter on the 'Select Filter' dialog box and click 'OK'. Click 'OK' on the 'Filter' dialog box to execute the command.

To edit a filter, retrieve it from the list, and choose 'Edit' or double-click on the condition. After changing any of the items that make up the condition, select 'Store' and 'OK' to save the changes.



Adds a new record.



Marks the current record for deletion. Marked records are physically deleted from disk when the Table is packed. The record will no longer appear but still exists until the Table is packed.



Closes the current form and returns the user to the Main Menu or previous form. Any changes made to the record are saved. Pressing [Esc] will also close the form and return the user to the previous screen. However, changes to the current record may not take effect.


## Edit Menu

The Edit menu is available to the user during data entry or editing. The menu comprises the following functions. Some or all may be available depending on the action currently being executed.

- |       |   |
|-------|---|
| Undo  | Undo the last change made to a field.                     |
| Cut   | Cut out (move) the highlighted text to the clipboard.     |
| Copy  | Copy the highlighted text to the clipboard.               |
| Paste | Paste the text from the clipboard into the current field. |


## Forms

Some forms are composed of several tabs to view data. Click on the tab for the appropriate view.

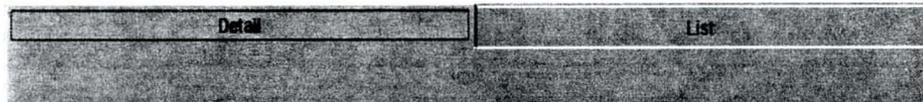



# 3. File

## New

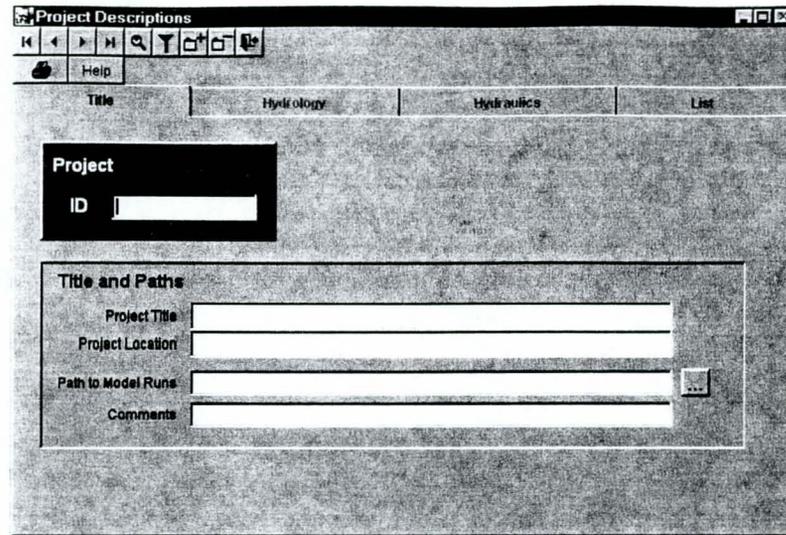

The selection of New from the File Menu is used to create a new project. It is necessary to fill in the Project ID, Title and the path to the model runs on the Title form. The Project ID will be used throughout the application for all files that refer to this project. Model runs for all projects will have the same naming convention. It is therefore necessary to **establish separate folders for each project's model runs**. Create the folder using Windows Explorer and then use the  button to locate the folder.

When finished with the Title data, enter the Hydrology default data. The Hydrology view varies depending on which model is selected.

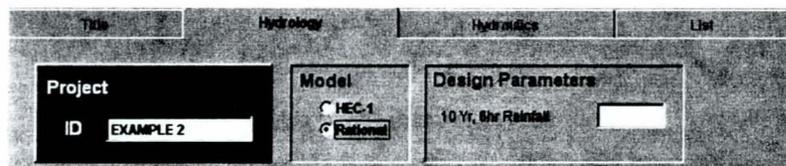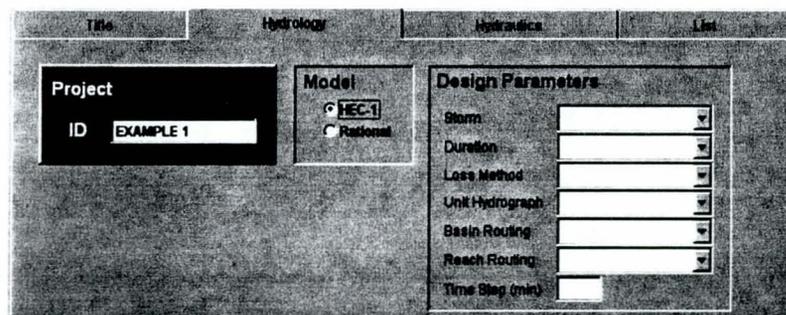

# Open

To open an existing project, make a selection from the drop down list.

Select Project

Drainage Design Management System

Select Project

Project: BETA010

Title: Example Single Storm, 6 Hour, Green Ampt, Clark  
Based on Jackrabbit Wash FIS

Path to Model Runs: D:\SYSTEMS\DDMSW\MODLRUNS\BETA010\

Go

# Edit

The selection of Edit from the File Menu is used to edit an existing project. All data on this form can be modified except the Project ID. If it is necessary to change the Project ID, "Rename" the project in Management. If default data is changed, make sure that the appropriate data on other forms is also modified. For example, if the reach routing method is changed from "Normal Depth" to "Kinematic Wave", it will be necessary to modify the routing data.

Project Descriptions

Help

Title Hydrology Hydraulics List

Project

ID: BETA010

Title and Paths

Project Title: Test Title




Project Location: Test location

Path to Model Runs: D:\DDMSW\MODELRUNS\

Comments:

# Management

The Management menu offers the following functions:
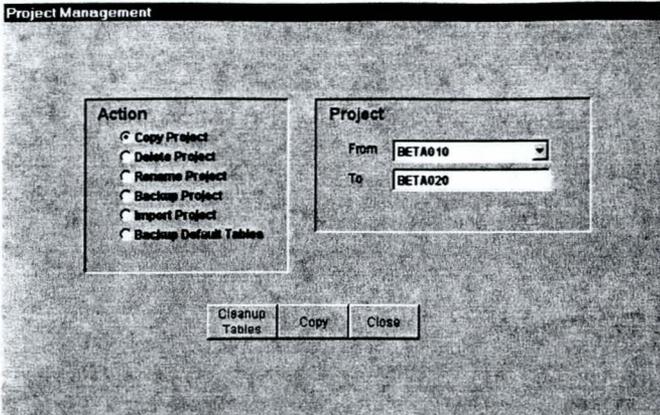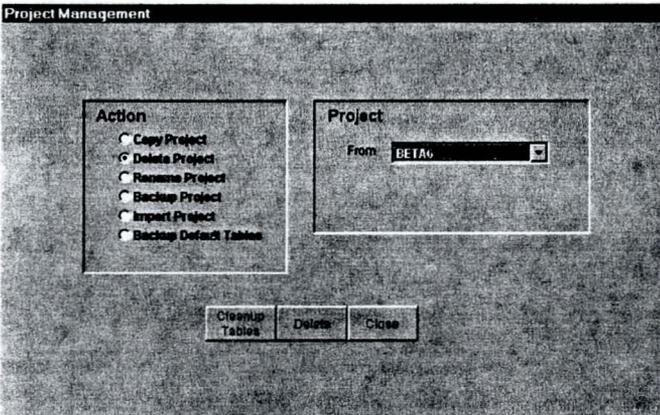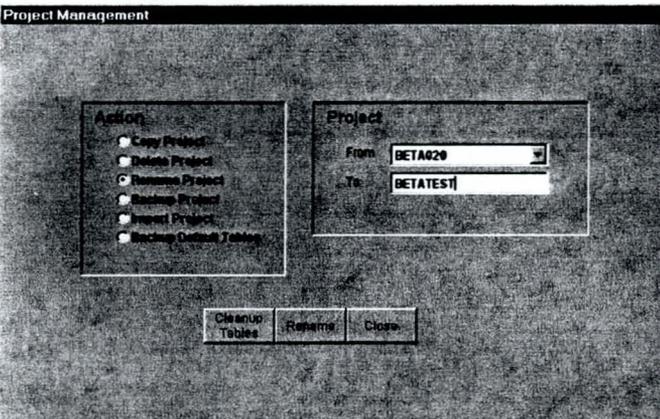
<p><u>Copy a Project</u></p> 	<p>Creates a new project and copies all records in the Tables to the new project. Model files are not copied. Select the current project from the drop-down list and enter the name of the new project in the 'To' field. Click the 'Copy' button.</p>
<p><u>Delete a Project</u></p> 	<p>Select the project from the drop-down list and click the 'Delete' button. All relevant records in the Tables are deleted. It is recommended to pack the Database to erase the deleted records from disk (see 'Utilities').</p>
<p><u>Rename a Project</u></p> 	<p>Use this function to change the name of a project. Select the project from the drop-down list and enter the new project name in the 'To' field. Click the 'Rename' button.</p>

### Backup Project

Project Management

Action

- Copy Project
- Delete Project
- Rename Project
- Backup Project
- Import Project
- Backup Default Tables

Project

From: BETA010

Cleanup Tables   Backup   Close

Use this option to backup project data to one 'zipped' file. The backup file is saved to the backup subdirectory and has the project name with a '.zip' extension.

### Import Project

Project Management

Action

- Copy Project
- Delete Project
- Rename Project
- Backup Project
- Import Project
- Backup Default Tables

Project

Cleanup Tables   Import   Close

When the 'Import' button is clicked, a dialogue box appears for the user to select a project backup file (.zip extension). If the project already exists in the Database, a message appears to warn the user that all data in the current project will be deleted and replaced with the imported data. The user has the choice to continue or cancel.

### Backup Default Tables

Project Management

Action

- Copy Project
- Delete Project
- Rename Project
- Backup Project
- Import Project
- Backup Default Tables

Project

Cleanup Tables   Backup   Close


This option backs up the default data to a file 'defaults.zip' in the backup subdirectory. To restore the default data, copy the defaults.zip file to the data subdirectory and unzip the file.

This form can also be used to get rid of "orphans" in DDMSW by clicking on "Cleanup Tables". Orphans records are records in a Table that do not belong to a Project ID.

# Setup

The selection of Setup from the File Menu is used to edit System settings. These include:

- Agency name
- User's name
- Path and file name to Adobe Acrobat Reader which is necessary to view help files.
- Path and file name for a text editor.

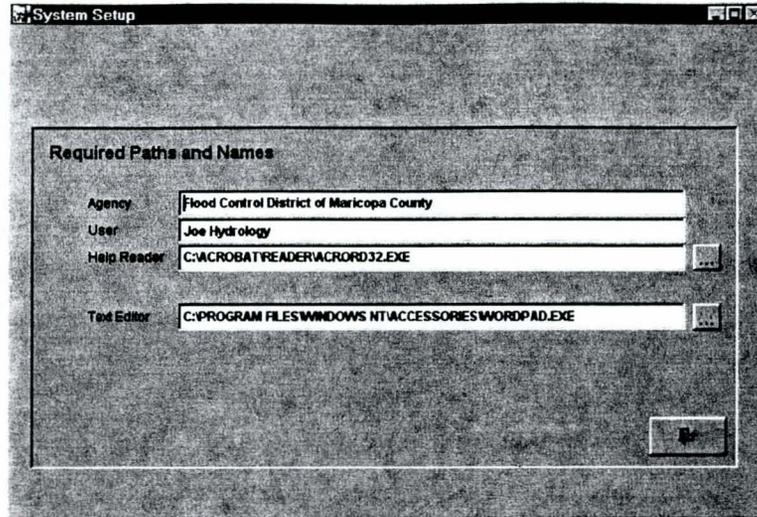

# 4. Hydrology

## Rainfall

### Prefre

Duration	2-Year	5-Year	10-Year	25-Year	50-Year	100-Year	500-Year
5 MIN	0.30	0.45	0.51	0.60	0.67	0.74	0.90
10 MIN	0.54	0.68	0.77	0.91	1.02	1.13	1.38
15 MIN	0.65	0.84	0.97	1.10	1.20	1.35	1.78
20 MIN	0.80	1.13	1.31	1.55	1.70	1.99	2.42
1 HOUR	1.05	1.39	1.62	1.95	2.30	2.45	3.03
2 HOUR	1.14	1.53	1.80	2.17	2.44	2.74	3.40
3 HOUR	1.19	1.62	1.91	2.31	2.62	2.90	3.65
6 HOUR	1.30	1.70	2.13	2.49	2.94	3.30	4.12
12 HOUR	1.40	1.90	2.38	2.92	3.34	3.75	4.71
24 HOUR	1.50	2.18	2.63	3.35	3.73	4.20	5.29

The selection of Prefre from the Hydrology\Rainfall menu is used to edit data required for running the Prefre model and to run the model. The Prefre program computes the rainfall depths for the durations and return periods shown on the form. The user must enter appropriate values for all fields shown on the form. The selection of data can be obtained from the County's Drainage Design Manuals.

### Rainfall Pattern

Project ID	Time (min)	Pattern	% of Rainfall
KVLTEST1		1.43	
KVLTEST1	15	1.43	0.8
KVLTEST1	30	1.43	1.6
KVLTEST1	45	1.43	2.5
KVLTEST1	60	1.43	3.2
KVLTEST1	75	1.43	4.1
KVLTEST1	90	1.43	5.0
KVLTEST1	105	1.43	5.8
KVLTEST1	120	1.43	6.6
KVLTEST1	135	1.43	7.5
KVLTEST1	150	1.43	8.7
KVLTEST1	165	1.43	9.9
KVLTEST1	180	1.43	11.9
KVLTEST1	195	1.43	15.0
KVLTEST1	210	1.43	23.4
KVLTEST1	225	1.43	41.3
KVLTEST1	240	1.43	70.6
KVLTEST1	255	1.43	87.5
KVLTEST1	270	1.43	91.6
KVLTEST1	285	1.43	94.4

The selection of Rainfall Pattern from the Hydrology\Rainfall menu is used to view the calculated rainfall pattern for the project. The data is calculated using procedures established in the County's Drainage Design Manual and cannot be edited.

## 6 Hour Distribution Defaults

Time (min)	Pattern 1	Pattern 2	Pattern 3	Pattern 4	Pattern 5
15	0.80	0.90	0.90	2.10	2.40
30	1.60	1.60	2.00	3.50	4.30
45	2.50	2.50	3.00	5.10	5.90
60	3.30	3.40	4.80	7.10	7.80
75	4.10	4.20	6.30	8.70	9.80
90	5.00	5.10	7.80	10.50	11.90
105	5.80	5.90	9.00	12.50	14.10
120	6.60	6.70	10.50	14.30	16.20
135	7.40	7.60	11.90	16.00	18.60
150	8.70	8.70	13.50	17.90	21.20
165	9.90	10.00	15.20	20.10	23.90
180	11.80	12.00	17.50	23.20	27.10
195	13.80	16.30	22.20	28.10	32.10
210	21.60	25.20	30.40	38.40	40.80
225	37.70	45.10	47.20	50.00	51.50
240	83.40	69.40	67.00	65.80	62.70
255	91.10	83.70	79.60	77.30	73.50
270	93.10	90.00	86.80	84.10	81.40
285	95.00	93.80	91.20	88.80	86.40

The selection of 6 Hour Distribution Defaults from the Hydrology\Rainfall menu is used to edit the default values for the rainfall patterns. The values should only be modified with caution as the default values are published by the County.

## Soils

### Data

The selection of Data from the Hydrology\Soil menu is used to add or edit soil data required for the Sub Basins.

**Soil Data**

Filter Soil Survey: **Agulla/Carefree**

Buttons: Renumber, Copy Record, Update Data

Detail View:

**ID**

Project: **KVLTEST1**

Sub Basin: **SB1**

Soil Survey: **Agulla/Carefree**

Map Unit: **108**

Sort: **10**

**Soil Area**

Area: **0.7000**

Area (%): **100.0**

**Soil Parameters**

	Value	Default	Custom
MOBAT	<b>0.31</b>	0.41	<input type="checkbox"/>
Rock Outcrop (%)	<b>30.0</b>		<input type="checkbox"/>
Effective (%)	<b>100</b>		

The important values to enter are the Sub Basin ID which must match a Sub Basin ID in the Sub Basins Table, a Map Unit code, which will come from the Soil Defaults and the area for this soil. All of the remaining values can be calculated using the **Update Data** button.



# Land Use

## Data

The selection of Data from the Hydrology\Land Use menu is used to add or edit land use data required for the Sub Basins.

Land Use Parameters			
	Value	Default	Custom
DTHETA Condition	Normal	Normal	<input type="checkbox"/>
Veg. Cover (%)	30.0	30.0	<input type="checkbox"/>
RTIMP (%)	5	5	<input type="checkbox"/>
IA (in)	0.30	0.30	<input type="checkbox"/>
KD Type	Low	Low	<input type="checkbox"/>
Kb	0.046		

The important values to enter are the Sub Basin ID which must match a Sub Basin ID in the Sub Basins Table, a land use code, which will come from the Land Use Defaults and the area for this land use. All of the remaining values can be calculated using the "Update Data" button.

There are three columns in the Land Use Parameters section of the form. The first column, 'Value', is the value that will be used in the modeling analysis. The second column, 'Default', is the calculated value based on the land use default values. The third column, 'Custom', ensures that a user-entered value will not be overwritten with the calculated default value when updating data.

## Defaults

The selection of Defaults from the Hydrology\Land Use menu is used to add or edit land use defaults required for the Sub Basins.


Land Use Parameter Defaults	
DTHETA Condition	Normal
Veg. Cover (%)	30.0
RTIMP (%)	5
IA (in)	0.30
KD Type	Low

It is important to enter appropriate values for all fields as land use calculations for the entire project will be based on these values.

## Basins

### Major Basins

The selection of Major Basins from the Hydrology\Basins menu is used to add a new or edit an existing Major Basin.

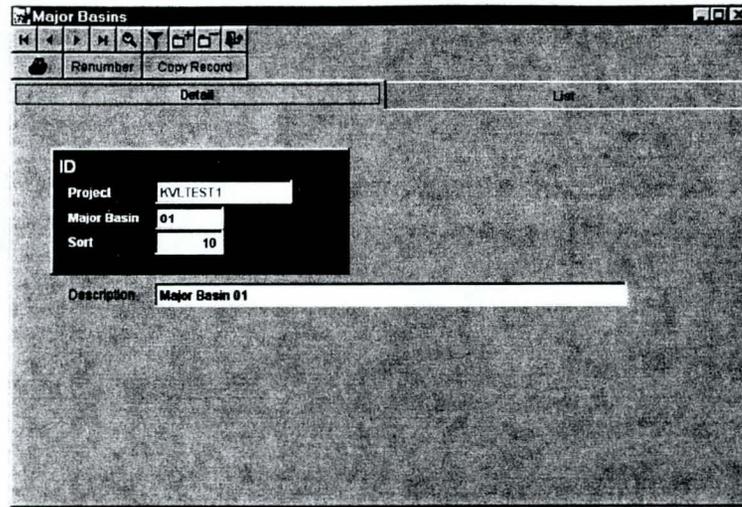

The screenshot shows a window titled "Major Basins" with a toolbar containing icons for navigation and actions like "Renumber" and "Copy Record". The main area is split into "Detail" and "List" views. The "Detail" view shows a form with the following fields:

ID	
Project	KVLTEST1
Major Basin	01
Sort	10
Description	Major Basin 01

Major Basins within a project are drainage basins that generally have a major outfall. Major Basins will have separate HEC-1 input files and their ID is designated by a **two character field**. Single digit numbers must therefore be preceded by a zero. Within a project, the first Major Basin ID is designated as "01", the second as "02" etc. until Basin "99" is reached. If the number of basins exceeds ninety-nine, a new project must be started. It is necessary to have at least one Major Basin (01) in a project.

### Sub Basins

The selection of Sub Basins from the Hydrology\Basins menu is used to add a new or edit an existing Sub Basin.

Sub Basins are drainage areas within a Major Basin. Sub Basin IDs are designated by a six character field **and must be unique within a project**. The preferred practice will be to designate the first two characters with the Major Basin ID and the remaining four characters in some systematic order.

Fields appearing on the Sub Basin form will vary depending on the defaults established in the project setup. For example if the Clark Unit Hydrograph is selected as the default, then the parameters for an S-Graph will not be available. There are three columns in the Rainfall Losses section of the form. The first column, Value, is the value that will be used in the modeling analysis. The second column, Calc'd, is the calculated value based on the default values in Land Use and Soils. The third column, Custom, ensures that a user entered value will not be overwritten with the calculated value when updating data.

Sub Basin Data

Renumber Copy Record Update Data

Detail List

**ID**

Project: KVLTEST1  
 Major Basin: 01  
 Sub Basin: SB1  
 Sort: 10

**Sub Basin Parameters**

Area (sq m): 0.700  
 Length (m): 1.000 Adj  
 Slope (ft/m): 10.0 10.0  
 Time-Area: Urban  
 Kb: 0.047

**Rainfall Losses**

	Value	Default	Custom
IA (in)	0.26	0.26	<input type="checkbox"/>
QTHETA	0.25	0.25	<input type="checkbox"/>
PSIF (in)	4.45	4.45	<input type="checkbox"/>
XCBAT (in/hr)	0.41	0.41	<input type="checkbox"/>
RTIMP (%)	49	49	<input type="checkbox"/>

USGE:  Calculate Slope  
 DSGE:

**Return Period Parameters**

	2 yr	5 yr	10 yr	25 yr	50 yr	100 yr
Tc (hrs)	1.50	1.40	1.23	1.05	0.95	0.87
R (hrs)	0.71	0.65	0.57	0.47	0.42	0.39

**Update Data** recalculates all values based the procedures established in the County's Drainage Design Manuals. Values with the Custom box checked will not be updated.

## Routing

The selection of Routing from the Hydrology/Basins menu is used to add a new or edit existing Sub Basin or Reach routing data.

Basin Routing Data

Renumber Copy Record

Type  Sub Basin  Reach

Detail List

**ID**

Project: KVLTEST1  
 Major Basin: 01  
 Type: BASIN  
 Area: SB1  
 Sort: 10

**Kinematic Wave**

L (ft): 3000.0  
 S (ft/ft): 0.0040  
 N: 0.030  
 SHAPE: TRAP  
 WD: 20.0  
 Z: 1.0

If Sub Basin is checked in the "Type" box at the top of the form, then Sub Basin routing data is available for editing. Likewise, if Reach is selected, then reach routing is available for editing. The Sub Basin ID must be unique and must match an ID in the Sub Basin data. The Reach ID must be unique within a project.

# Distributions

## Time-Area

The selection of Time-Area from the Hydrology\Distributions menu is used to edit Time-Area distributions used for the Clark Unit Hydrograph. Only data in the "Manual" column can be edited. Time-Area is only available if "Clark" is selected as the default unit hydrograph.

Percent	Urban	Natural	HEC-1 Default	Manual
10	5.0	3.0	4.5	
20	12.0	5.0	12.2	
30	30.0	8.0	23.2	
40	65.0	12.0	35.8	
50	77.0	20.0	50.0	
60	84.0	43.0	64.2	
70	90.0	75.0	76.3	
80	94.0	90.0	87.4	
90	97.0	96.0	95.7	
100	100.0	100.0	100.0	

## S-Graph


The selection of S-Graph from the Hydrology\Distributions menu is used to edit S-Graph distributions used for the S-Graph Unit Hydrograph. Only data in the "Manual" column can be edited. S-Graph is only available if "S-Graph" is selected as the default unit hydrograph.

% of Ultimate Q	Valley	Mountain	Desert/Rangeland	Agriculture	Manual
3	23.0	23.0	23.0	21.0	
4	30.0	31.0	31.0	31.0	
5	38.0	37.0	36.9	37.0	
9	41.0	42.0	41.7	41.0	
10	45.7	46.0	45.3	45.0	
12	50.0	49.6	49.7	48.0	
14	54.1	53.4	52.2	52.0	
18	58.0	56.8	56.4	56.0	
19	61.7	60.0	59.1	59.0	
20	65.2	63.1	62.5	62.0	
23	66.5	66.1	65.3	64.0	
24	71.6	69.0	69.0	67.5	
26	74.6	71.8	70.5	70.0	
28	77.5	74.4	73.2	72.5	
30	80.2	76.8	75.7	75.0	
32	82.7	79.1	78.3	77.5	
34	85.0	81.2	80.7	80.0	
36	87.2	83.2	83.1	82.5	
38	89.0	85.1	85.5	85.0	

# HEC-1

## Run HEC-1

This function runs the HEC-1 model for selected Major Basins within a project.

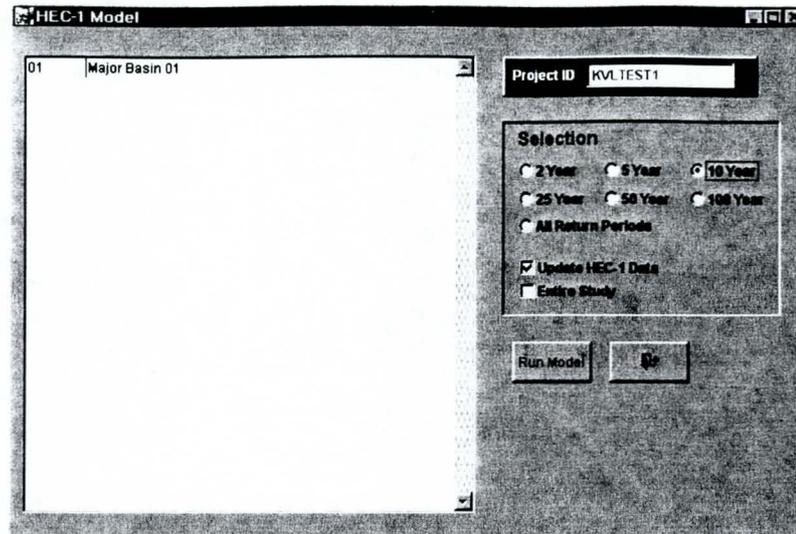

Highlight the Major Basin to model and select the appropriate return period. The results of the model run(s) will be placed in a user defined directory established in the project defaults. The resultant file names will be distinguished by the Major Basin and return period being modeled.

The HEC-1 data is used for all return periods. When running the model, the appropriate rainfall data is inserted for the particular return period. When 'Update HEC-1 Data' is selected, the sub basin and routing data is updated from the relevant Tables in the Database.

**Note: DDMSW uses a special version of HEC-1 to facilitate data management. Using another version of HEC-1 will result in errors during the importing of final results.**

## Edit HEC-1 Data

This selection allows the user to add a new HEC-1 file or edit an existing Major Basin HEC-1 file within a project.

FD	F1	F2	F3	F4	F5	F6	F7	F8	F9	F10
ID	Proj	ct ID: K	VLTEST1	- Major	Basin: 0	1 - Retu	m Perio	d: 100 Y	ears	
IT	1			2000						
IO	3									
KC	SB1	BASIN								
BA	700									
IN	15									
PB	3.154									
PC	0.000	0.008	0.016	0.025	0.033	0.041	0.050	0.058	0.066	0.075
PC	0.087	0.099	0.119	0.150	0.234	0.413	0.766	0.875	0.916	0.944
PC	0.956	0.968	0.979	0.990	1.000					
LG	0.28	0.25	4.45	0.41	49					
UC	0.875	0.391								
UA	0	5.0	18.0	30.0	65.0	77.0	84.0	90.0	94.0	97.0
UA	100									
KC	SB1	ROUTE	BASIN							
RK	3000	0.0040	0.030		TRAP	20.0	1.0			
KC	SB2	BASIN								
BA	500									
LG	0.18	0.25	4.45	0.49	84					

The data in this file can be exported to an ASCII file to facilitate editing by clicking on the "Export" button and following the instructions on the screen. When finished with the editing, the file can be imported by clicking on the "Import" button. Importing replaces the existing data for the selected Major Basin. To view a different Major Basin's data, use the Major Basin pull-down menu.

## View Summary Results

This displays summary results of model runs. The data cannot be edited.

Basin ID	Type	Sub Basin/Reach	Area	Q2	Q5	Q10	Q25	Q50	Q100
01	Hydrograph	SB1	0.7000	139	246	340	523	679	838
01	Hydrograph	SB2	0.5000	231	354	493	655	790	934
01	Routed	SB1	0.7000	139	246	345	523	678	837
01	Routed	SB2	0.5000	231	383	491	653	788	922

Clicking on "Hydrograph, Routed, Combined or All", will filter the data to the selection. The data can also be ordered by "Sub Basin or Numeric" where Numeric is the natural order from the model results.



## 5. Hydraulics

---

To be developed


## 6. GIS

---

To be developed

# 7. Utilities

## Export Data

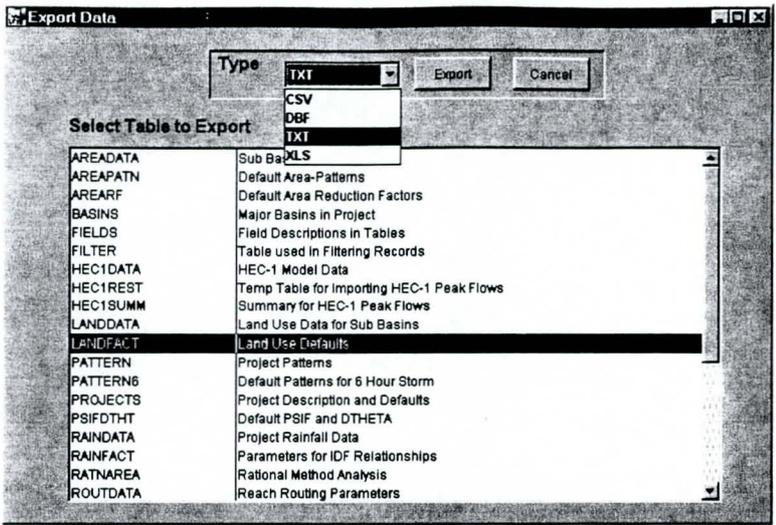

The selection of Export Data from the Utilities menu is used to export a Table from the Database to a file in a different format. All the record data in the Table are exported. Note that the Table contents are not removed, but are copied to a different file format. The file formats supported include:

**CSV** Data is exported into a file one record per line, with each field separated by a comma. Character fields are enclosed in quotes. For example:

```
projectid,lucode,dthetadesc,vegcover,rtimp,ia,kn,kbdesc,group,descript,c10,iadesc,sort
"BETA010","M","Dry",25.0,0,0.25,0.050,"Max",,"","MOUNTAIN",0.00,"",10
"BETA010","H","Dry",30.0,0,0.15,0.040,"Hi",,"","HILLSLOPE",0.00,"",20
"BETA010","D","Dry",30.0,0,0.35,0.030,"Low",,"","DESERT RANGELAND",0.00,"",30
```


**TXT** Data is exported one record per line in ASCII text that can be read by any text editor. The data is in fixed format (columns). For example:

BETA010	M	Dry	25.0	0	0.25	0.050	Max			MOUNTAIN
BETA010	H	Dry	30.0	0	0.15	0.040	Hi			HILLSLOPE
BETA010	D	Dry	30.0	0	0.35	0.030	Low			DESERT RANGELAND


**DBF** Exports data into a format that can be read by a Database program such as Dbase or FoxPro.

**XLS** Select this type to create an spreadsheet which can be opened in Microsoft Excel.

Use the mouse to highlight the Table and select an export type from the drop down selection box, then click 'Export'. The contents (all records) of the selected Table is saved on disk in the chosen format. The user is prompted to enter a filename and location for the export file.

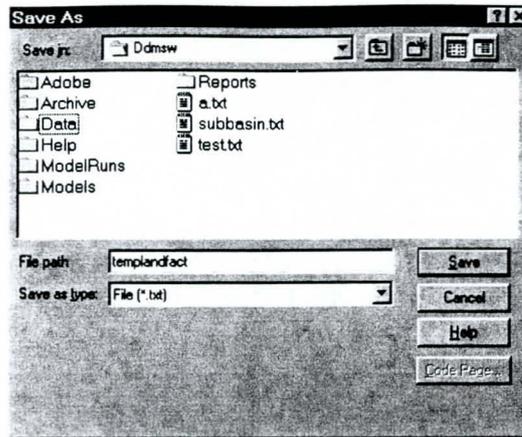

## Import Data

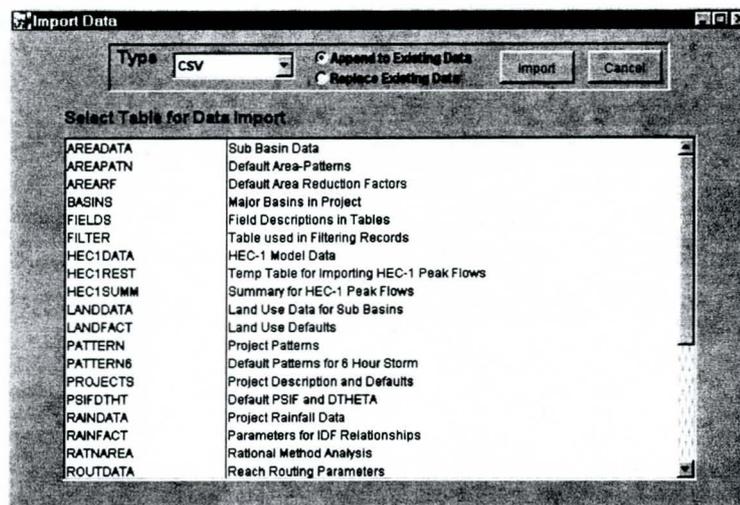


The selection of Import Data from the Utilities menu is used to import data originating from another source, such as a spreadsheet, text file or another database, into a selected table. The file formats supported include CSV, TXT, DBF, and XLS, as described in 'Export Data'. There are two options:

- **Append to Existing Data**      This option adds the data to the existing data. The results will include the current and the newly imported data.
- **Replace Existing Data**      This option deletes the current data in the table, and then replaces it with the new data.

**It is important that the data to be imported has the same structure as the importing Table, otherwise fields will be truncated and records rejected.** For this reason, a

good practice is to first export a Table and then use the exported file as a template for the acceptable format.

Highlight the Table to append or replace, select the file type and click 'Import'. The following dialogue box appears for the user to select the file to import. Highlight the filename and click 'OK'.

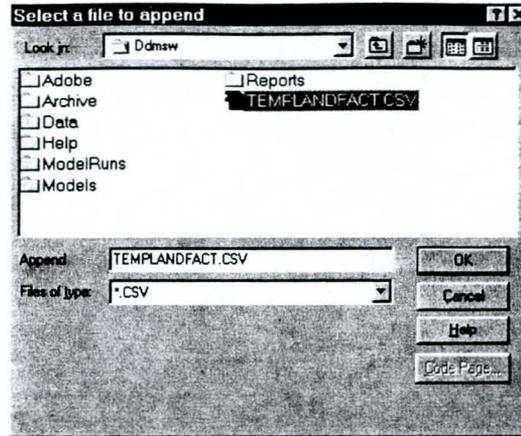

## Pack Tables

This function rebuilds the Table indexes, and then packs all Tables in the Database. Packing is the process of **permanently removing records** that have been marked for deletion. Once a Table is packed, records cannot be recovered. Packing recoups disk space occupied by deleted records. It should not be necessary to pack the Database frequently, but on occasion after many records have been deleted over time.



**Caution: Packing Tables take a few minutes to complete. Do not interrupt the process once it has begun.**

## Table Descriptions


The selection of Table Descriptions from the Utilities menu is used to view the name and description of Tables used in the application. The data cannot be edited.

## Field Descriptions

The selection of Field Descriptions from the Utilities menu is used to view the structure of each Table used in the application. The data cannot be edited.

# Import DOS Family

The selection of Import DOS Family from the Utilities menu is used to import data developed in the DOS version of DDMS.

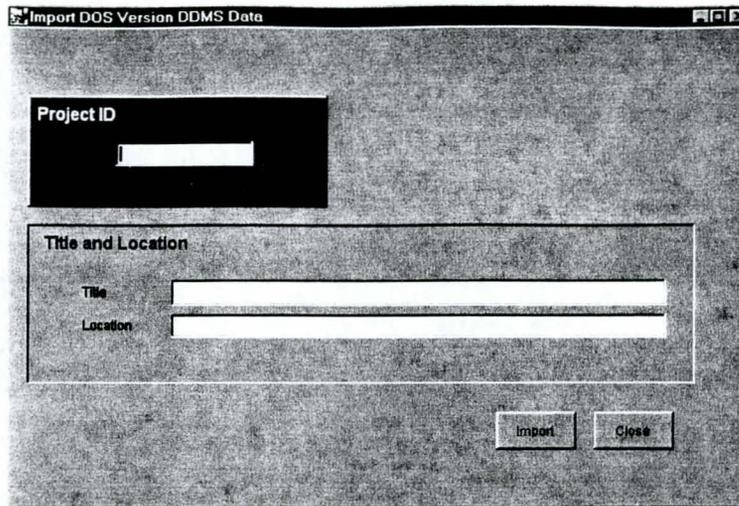

Enter a Project ID, title and location for the data to be imported. This is the same information as starting a new project. Then click the "Import" button. The program will import data as follows:

Sub Basin Area data	From a file with an .SBR extension
Default Land Use data	From a file with an .LDF extension
Sub Basin Land Use data	From a file with an .SUB extension
Sub Basin Soil data	From a file with an .SUB extension
Hydrograph Type	From a file with an .SUB extension
Precipitation data	From a file with an .PFI extension
Storms, duration, Timearea, NMIN	From either *M11 or *M21

If the above files are not available for the "family", then not all of the required data will be imported and the remaining required data will have to be entered manually into the Database.



# Example

## Introduction

There are a number of Projects that have been used to test the application. The data in these projects can be reviewed by importing the Project to see how data is entered for the various type of default settings. The following are the default values for the various Beta Projects:

<u>Project ID</u>	<u>Hydrograph</u>	<u>Storms</u>	<u>Duration</u>	<u>Loss Method</u>
KVLTEST1	Clark	Single	6 Hour	Green-Ampt
BETA010	Clark	Single	6 Hour	Green-Ampt
BETA020	S-Graph	Single	6 Hour	Green-Ampt
BETA030	Clark	Single	6 Hour	Init & Uniform
BETA040	S-Graph	Single	6 Hour	Init & Uniform
BETA050	Clark	Single	24 Hour	Green-Ampt
BETA060	S-Graph	Single	24 Hour	Green-Ampt
BETA070	Clark	Single	24 Hour	Init & Uniform
BETA080	S-Graph	Single	24 Hour	Init & Uniform
BETA090	Clark	Multiple	6 Hour	Green-Ampt
BETA100	S-Graph	Multiple	6 Hour	Green-Ampt
BETA110	Clark	Multiple	6 Hour	Init & Uniform
BETA120	Clark	Multiple	24 Hour	Green-Ampt
BETA130	S-Graph	Multiple	24 Hour	Green-Ampt

## Establish a New Project (KVLTest1)

The steps to establish a new project through to running the HEC-1 model and viewing the results are as follows:

1. Establish Path for Model Runs
2. Create New Project and Establish Defaults
3. Establish Rainfall Data for Project
4. Establish Land Use Defaults
5. Establish Soil Defaults
6. Establish Land Use Data
7. Establish Soil Data
8. Establish Major Basin
9. Establish Sub Basin Data
10. Establish Routing Data
11. Develop Draft HEC-1 Input File
12. Edit Draft HEC-1 Input File
13. Run HEC-1 Model
14. View Model Summary Results

## 1. Establish Path for Model Runs

Create a folder for the HEC-1 model runs. For this example, a new folder C:\ddmsw\kvltest1 has been created.

## 2. Create New Project and Establish Defaults

Select *New* from the *File* Menu and fill in data for Title and Hydrology defaults.

The screenshot shows the 'Project Descriptions' dialog box with the 'Title' tab selected. The 'Project' section has the ID 'KVLTEST1'. The 'Title and Paths' section contains the following fields:

Project Title	Example One
Project Location	Maricopa County, Arizona
Path to Model Runs	D:\DDMSW\MODELRUNS\
Comments	This is example 1

The screenshot shows the 'Project Descriptions' dialog box with the 'Hydrology' tab selected. The 'Project' section has the ID 'KVLTEST1'. The 'Model' section has 'HEC-1' selected. The 'Design Parameters' section contains the following fields:

Storm	Single
Duration	6 Hour
Loss Method	Green-Ampt
Unit Hydrograph	Clark
Basin Routing	Kinematic Wave
Reach Routing	Kinematic Wave
Time Step (min)	1

### 3. Establish Rainfall Data for Project

Select *Prefre* from the *Hydrology\Rainfall* Menu. Fill in data shown below.

The screenshot shows the 'Rainfall Data' dialog box with the following fields:

- ID:** Project
- Location:** Primary Zone  Short Duration Zone
- Point Values (in):**

	2-Year	100-Year
8-Hour	1.20	3.20
24-Hour	1.50	4.10

A 'Run Prefre' button is located below the input fields.


Click  to run the Prefre model and establish rainfall data as shown below.

The screenshot shows the 'Rainfall Data' dialog box with the 'Run Prefre' button highlighted. Below the dialog box is a table of rainfall data:

Duration	2-Year	5-Year	10-Year	25-Year	50-Year	100-Year	500-Year
5 MIN	0.30	0.40	0.47	0.57	0.64	0.71	0.88
10 MIN	0.48	0.61	0.72	0.87	0.98	1.09	1.36
15 MIN	0.55	0.76	0.91	1.10	1.25	1.40	1.75
30 MIN	0.73	1.02	1.22	1.49	1.70	1.90	2.38
1 HOUR	0.89	1.26	1.51	1.85	2.12	2.38	2.99
2 HOUR	1.00	1.41	1.69	2.07	2.37	2.66	3.34
3 HOUR	1.07	1.51	1.81	2.22	2.53	2.85	3.57
6 HOUR	1.20	1.70	2.03	2.49	2.85	3.20	4.01
12 HOUR	1.35	1.93	2.31	2.94	3.25	3.65	4.59
24 HOUR	1.50	2.15	2.59	3.18	3.64	4.10	5.16


## 4. Establish Land Use Defaults

Select *Defaults* from the *Hydrology/Land Use* Menu. The first time you come to this screen, it will look like the following screen. This screen will look different if "Green-Ampt" is not the default Loss Method.

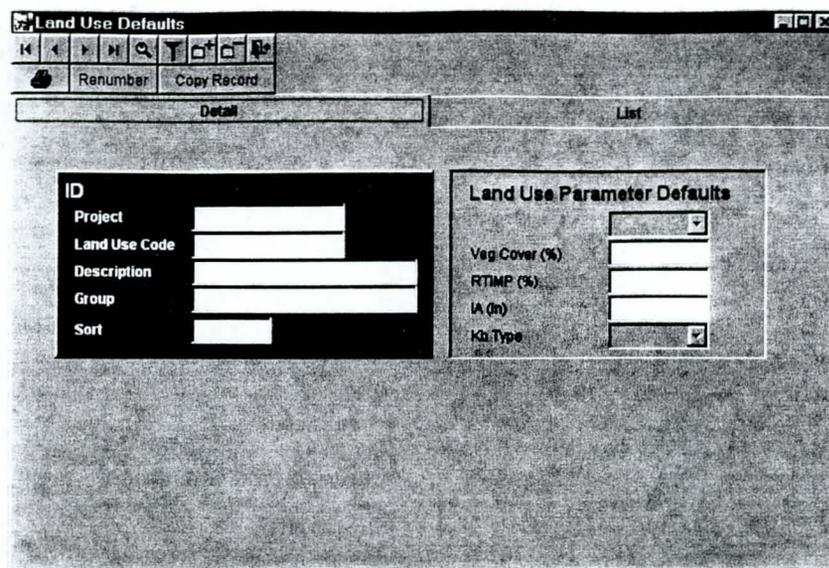

The screenshot shows the 'Land Use Defaults' window with two tabs: 'Detail' and 'List'. The 'Detail' tab is active, displaying two main sections: 'ID' and 'Land Use Parameter Defaults'. The 'ID' section has five input fields: Project, Land Use Code, Description, Group, and Sort. The 'Land Use Parameter Defaults' section has four input fields: Veg Cover (%), RTIMP (%), IA (in), and Kb Type. All fields are currently empty.

Click  to create a new record and fill in the data for the first record as shown below. Use appropriate Tables in the County's Drainage Manual for reference.

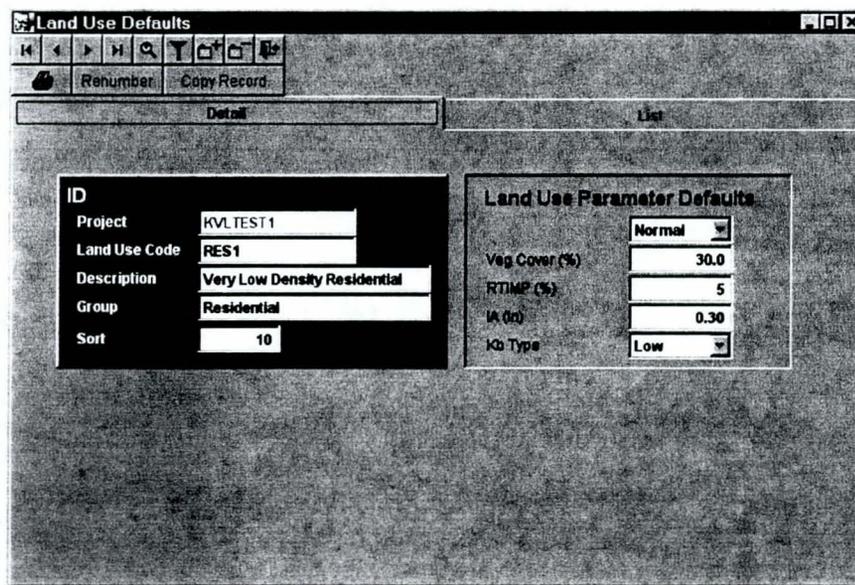


The screenshot shows the 'Land Use Defaults' window with the same 'Detail' tab active. The input fields are now populated with the following data:

ID	
Project	KVLTEST1
Land Use Code	RES1
Description	Very Low Density Residential
Group	Residential
Sort	10

Land Use Parameter Defaults	
Veg Cover (%)	Normal
RTIMP (%)	30.0
IA (in)	5
Kb Type	0.30
	Low

To add new records either create a new record as just described or click  (use Browse to view data) and edit the data for the new record.

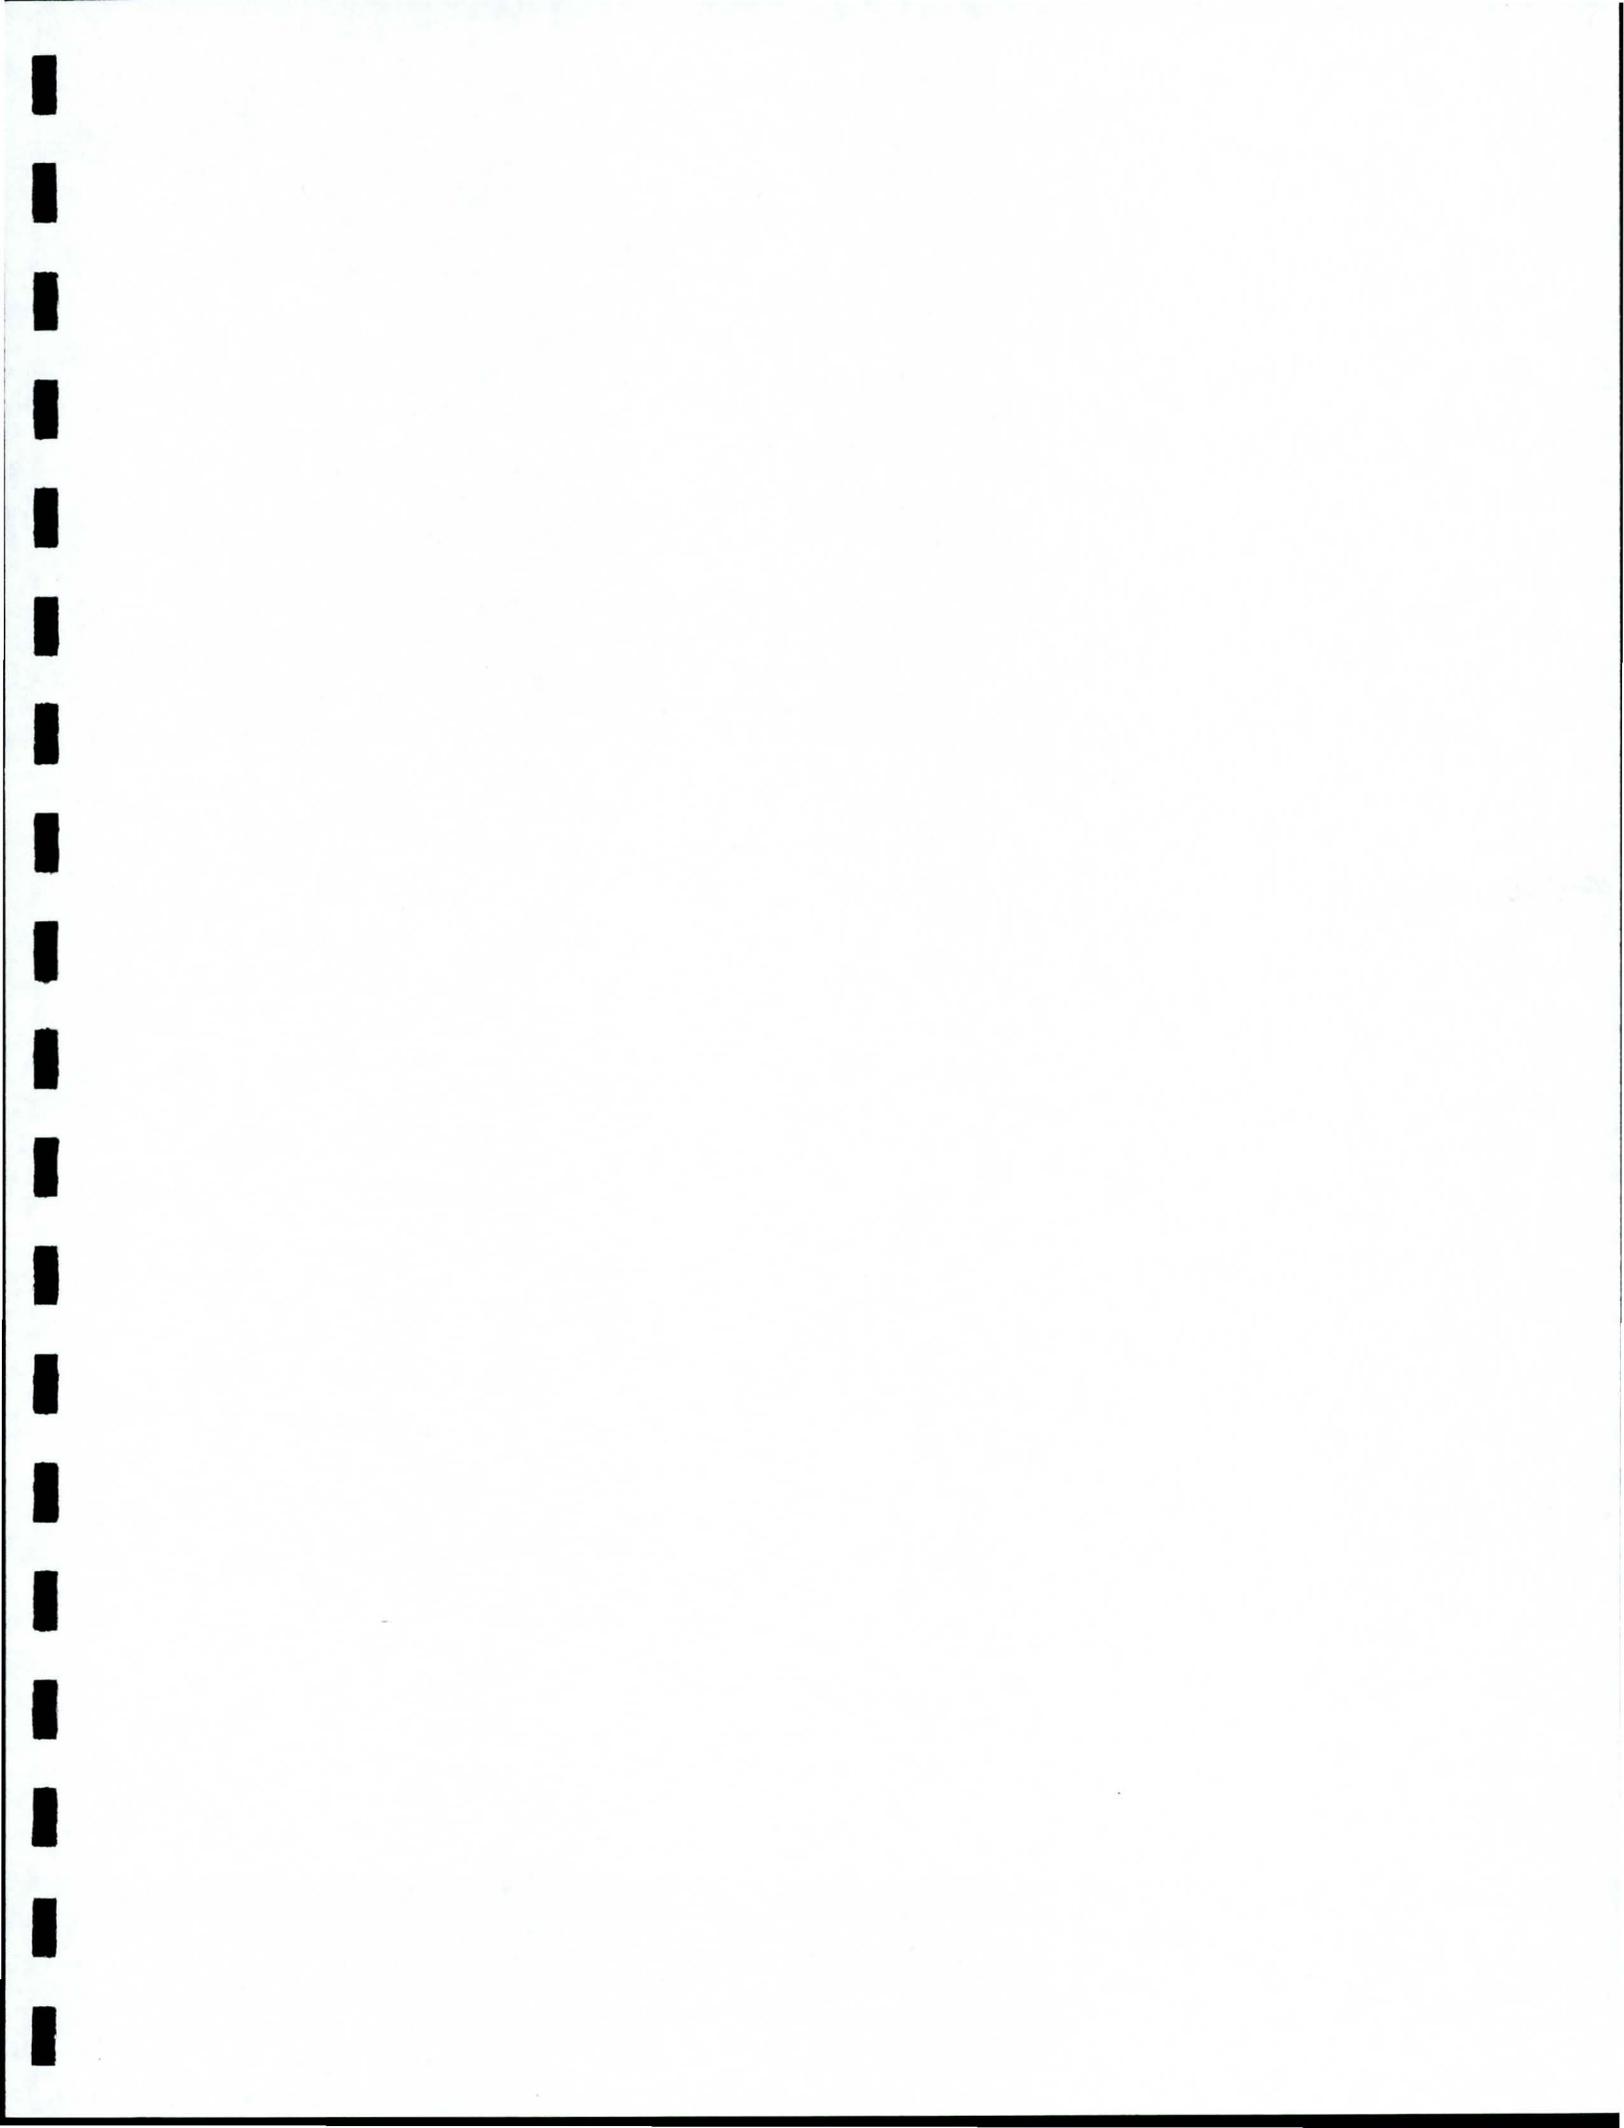

## 5. Establish Soil Defaults

Select *Defaults* from the *Hydrology\Soil* Menu. If Soil Default data does not exist for this project, then the County default Table will be loaded. The user can then modify the data to establish different defaults to be used for this project. If it is necessary to add new data, then do it in the same manner as adding new records for the Land Use Defaults. The following view is shown in Browse mode.

Detail		List			
Sort	Project ID	Soil Survey	Mag Unit	XCSAT	Rock %
10	KVLTEST1	Maricopa	A_1	0.41	
20	KVLTEST1	Maricopa	A_2	0.41	
30	KVLTEST1	Maricopa	A_3	0.58	
40	KVLTEST1	Maricopa	A_4	0.58	
50	KVLTEST1	Maricopa	A_5	0.43	
60	KVLTEST1	Maricopa	A_6	0.62	
70	KVLTEST1	Maricopa	A_7	0.62	
80	KVLTEST1	Maricopa	A_8	0.96	
90	KVLTEST1	Maricopa	A_9	0.27	
100	KVLTEST1	Maricopa	A_10	0.94	
110	KVLTEST1	Maricopa	A_11	0.94	
120	KVLTEST1	Maricopa	A_12	0.01	
130	KVLTEST1	Maricopa	A_13	0.01	
140	KVLTEST1	Maricopa	A_14	1.04	
150	KVLTEST1	Maricopa	A_15	0.54	
160	KVLTEST1	Maricopa	A_16	0.44	15.0
170	KVLTEST1	Maricopa	A_17	0.44	15.0
180	KVLTEST1	Maricopa	A_18	0.33	15.0
190	KVLTEST1	Maricopa	A_19	0.10	

## 6. Establish Land Use Data

Select *Data* from the *Hydrology\Land Use* Menu. Add or Copy records to populate the necessary data as shown below. It is only necessary to add the Sub Basin ID; select the Land Use and add the Area in square miles. Then click **Update Data** to populate the Default Values. If a non-default value is used, it will be necessary to check the adjacent Custom box. Values with adjacent Custom box checked will not be updated.

ID	
Project	KVLTEST1
Sub Basin	SB1
Land Use	RES1
Sort	10

Land Use Area	
Area (sq. mi.)	0.5000
Area (%)	50.0

Land Use Parameters			
	Value	Default	Custom
DTTHETA Condition	Normal	Normal	<input type="checkbox"/>
Veg. Cover (%)	30.0	30.0	<input type="checkbox"/>
RTIME (%)	5	5	<input type="checkbox"/>
IA (in)	0.30	0.30	<input type="checkbox"/>
Kb Type	Low	Low	<input type="checkbox"/>
Kb	0.046		<input type="checkbox"/>

Be sure to enter land use data for each Sub Basin ID in this Project and make sure there is sufficient land use data to cover the entire Sub Basin.

## 7. Establish Soil Data

Select *Data* from the *Hydrology\Soil* Menu. Add or Copy records to populate the necessary data as shown below. It is only necessary to add the Sub Basin ID, select the Map Unit and add the Area in square miles. Then click **Update Data** to populate the Default Values. If a non-default value is used, it will be necessary to check the adjacent Custom box. Values with adjacent Custom box checked will not be updated.

The screenshot shows the 'Soil Data' window with the following fields and values:

- ID Section:**
  - Project: KVL TEST 1
  - Sub Basin: SB2
  - Soil Survey: Aguila Carefree
  - Map Unit: 100
  - Sort: 10
- Soil Area Section:**
  - Area: 0.5000
  - Area (%): 100.0
- Soil Parameters Section:**

	Value	Default	Custom
XCBAT	0.31	0.31	<input type="checkbox"/>
Rock Outcrop (%)	30.0	30.0	<input type="checkbox"/>
Effective (%)	100		

Be sure to enter soil data for each Area ID in this Project and make sure there is sufficient soil data to cover the entire Area ID's area.

## 8. Establish Major Basin

Select Major Basins from the *Hydrology\Basins* Menu. Add or Copy records to populate the necessary data as shown below. Each hydrology model run will be for a unique Major Basin ID. Select 01 for the first basin, 02 through 99 for other Major Basins.

The screenshot shows the 'Major Basins' window with the following fields and values:

- ID Section:**
  - Project: KVL TEST 1
  - Major Basin: 01
  - Sort: 10
- Description Section:**
  - Description: Major Basin 01

## 9. Establish Sub Basin Data

Select *Sub Basins* from the *Hydrology\Basins* Menu. Add or Copy records to populate the necessary data as shown below. Forms may look different depending on the established project defaults. To populate the remaining data, click "Update Data". This updates all records for the Sub Basin data for this Project.

The screenshot shows the 'Sub Basin Data' window with the following data:

ID		Sub Basin Parameters		Rainfall Losses		
Project	KVLTEST1	Area (sq mi)	0.500	IA (in)	0.10	0.30 <input checked="" type="checkbox"/>
Major Basin	01	Length (mi)	0.600 Adj	DTHETA	0.29	0.25 <input checked="" type="checkbox"/>
Sub Basin	SB2	Slope (ft/mi)	10.0 10.0	PSIF (in)	4.45	4.45 <input type="checkbox"/>
Sort	10	Time-Area	Urban	XCBAT (in/hr)	0.37	0.37 <input type="checkbox"/>
		Ka	0.046	RTIMP (%)	35	35 <input type="checkbox"/>
				USGE		Calculate Slope
				DSGE		

Return Period Parameters						
	2 yr	5 yr	10 yr	25 yr	50 yr	100 yr
Tc (hrs)	1.39	1.02	0.89	0.74	0.67	0.62
R (hrs)	0.52	0.37	0.32	0.26	0.23	0.21

Following the Update Data, if there are any errors or values falling outside standards, then a report will come to the screen that can be printed. Review this report to see what needs to be fixed.

## 10. Establish Routing Data


Select *Routing* from the *Hydrology\Basins* Menu. Add or Copy records to populate the necessary data as shown below. Forms may look different depending on the established project defaults.

The screenshot shows the 'Reach Routing Data' window with the following data:

ID		Kinematic Wave	
Project	KVLTEST1	L (ft)	3000.0
Major Basin	01	S (ft/c)	0.0040
Type	REACH	N	0.030
Reach	SB2	SHAPE	TRAP
Sort	10	WD	20.0
		Z	1.0

## 11. Develop Draft HEC-1 Input File

Select *Develop Draft Model Data* from the *Hydrology\HEC-1* Menu. Select the appropriate Major Basin and check whether or not to create Draft Routing Cards. Click on "Create Draft".

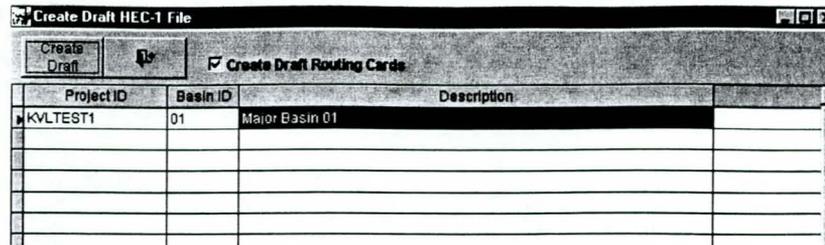


## 12. Edit Draft HEC-1 Input File

Select *Edit HEC-1 Data* from the *Hydrology\HEC-1* Menu. Select the appropriate Major Basin ID.

F0	F1	F2	F3	F4	F5	F6	F7	F8	F9	F10
		ROUTE	BASIN							
RS	6	STOR	-1							
RC	0.035	0.038	0.035	4224	0.0012	99.70				
RX	510.0	1510.0	1585.0	1596.0	1600.0	1612.0	1662.0	2262.0		
RY	99.7	94.1	93.6	92.2	92.2	93.6	94.9	99.7		
		ROUTE	BASIN							
RS	6	STOR	-1							
RC	0.035	0.038	0.035	4224	0.0012	99.70				
RX	510.0	1510.0	1585.0	1596.0	1600.0	1612.0	1662.0	2262.0		
RY	99.7	94.1	93.6	92.2	92.2	93.6	94.9	99.7		
		ROUTE	BASIN							
RS	6	STOR	-1							
RC	0.035	0.038	0.035	4224	0.0012	99.70				
RX	510.0	1510.0	1585.0	1596.0	1600.0	1612.0	1662.0	2262.0		
RY	99.7	94.1	93.6	92.2	92.2	93.6	94.9	99.7		
		ROUTE	BASIN							
RS	6	STOR	-1							
RC	0.035	0.038	0.035	4224	0.0012	99.70				
RX	510.0	1510.0	1585.0	1596.0	1600.0	1612.0	1662.0	2262.0		
RY	99.7	94.1	93.6	92.2	92.2	93.6	94.9	99.7		

The best way to edit this data is to export the file to an ASCII file and edit the data and then import the ASCII file when edits are complete. Click "Export" to export the file. A dialogue box comes up with the default model runs path and the Basin ID. Click save.

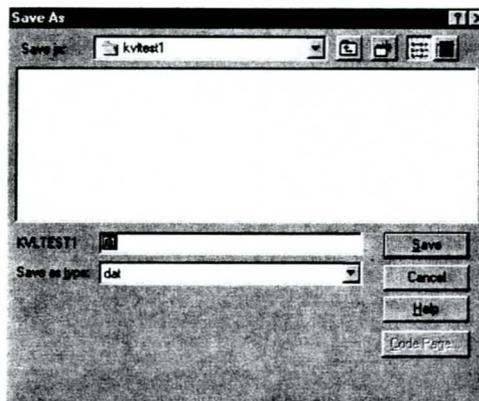

The following is an example of the draft HEC-1 ASCII file (note the routing cards are at the bottom).

```


D:\DDMSW\kvtest1\01.DAT
1 ID Project ID: KVLTEST1 - 10 Year Storm
2 ID
3 IT 1 2000
4 IO 3
5 KK SB1 BASIN
6 BA .700
7 IW 15
8 PB 2.001
9 PC .000 .009 .016 .025 .034 .042 .051 .059 .067 .075
10 PC .087 .100 .119 .151 .234 .415 .763 .873 .915 .944
11 PC .956 .967 .979 .989 1.000
12 LG .240 .260 3.950 .540 95.000
13 UC 1.004 .456
14 UA 0 5 16 30 65 77 84 90 94 97
15 UA 100
16 KK SB2 BASIN
17 BA .500
18 LG .100 .290 3.350 1.020 80.000
19 UC .771 .273
20 UA 0 5 16 30 65 77 84 90 94 97
21 UA 100
22 ZZ
23 KK SB1 ROUTE
24 RK 3000 0.0040 0.030 TRAP 20.0 1.0
25 KK SB2 ROUTE
26 RK 3000 0.0040 0.030 TRAP 20.0 1.0
27
  
```

Depending on the default routing option, the routing cards will be different. If the routing card option was selected when developing the draft file, the records will be at the bottom of the file. Move the routing cards to the correct location and clean up any trailing lines in the file as follows:

```

D:\DDMSW\kvtest1\01.DAT
1 ID Project ID: KVLTEST1 - 10 Year Storm
2 ID
3 IT 1 2000
4 IO 3
5 KK SB1 BASIN
6 BA .700
7 IW 15
8 PB 2.001
9 PC .000 .009 .016 .025 .034 .042 .051 .059 .067 .075
10 PC .087 .100 .119 .151 .234 .415 .763 .873 .915 .944
11 PC .956 .967 .979 .989 1.000
12 LG .240 .260 3.950 .540 95.000
13 UC 1.004 .456
14 UA 0 5 16 30 65 77 84 90 94 97
15 UA 100
16 KK SB1 ROUTE
17 RK 3000 0.0040 0.030 TRAP 20.0 1.0
18 KK SB2 BASIN
19 BA .500
20 LG .100 .290 3.350 1.020 80.000
21 UC .771 .273
22 UA 0 5 16 30 65 77 84 90 94 97
23 UA 100
24 KK SB2 ROUTE
25 RK 3000 0.0040 0.030 TRAP 20.0 1.0
26 ZZ
  
```

Finally after editing the ASCII file it can be imported. Click **Import** and select the appropriate file to import. A dialogue box comes up for the selection.

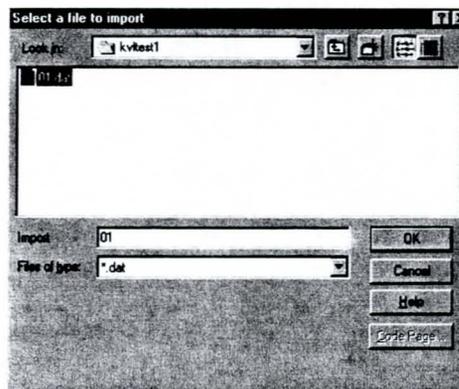



### Issues that need to be resolved

- 1) Receive the error "CSGRAPH not found" when creating a draft HEC-1 with sub-basins using the Desert/Rangeland S-graph.
- 2) The program allows user to duplicate Project ID when creating a "new" project under File.
- 3) Difficulty importing comma delineated or tab delineated ASCII files (\*.txt).
- 4) When importing soils data, map units do not show up in "Detail" tab of the Soil Data editor. Similar problems when importing land uses.
- 5) Cannot import from latest Excel version - the first record (row) is deleted during the process. User has to save in Excel version 5.0 format for import to work correctly.
- 6) Program locks up when it encounters a non-default map unit while updating soils data.
- 7) When importing soils and land use data from .XLS file, the subbasin names are truncated to 5 characters.
- 8) If Basin and Reach Routing use different methods, there are errors in the HEC-1 model created by DDMSW.
- 9) Kb calculated incorrectly in the Rational Method module. (Calculations are OK in HEC-1 module).
- 10) DDMSW does not allow user to change the number of ordinates on the IT card - always forces 2000.
- 11) DDMSW does not update the HEC-1 file with changes to basin area (BA).

### Suggested New Features

- 1) Installation option - silent (quiet) mode should be included.
- 2) Run off of network for easier upgrades and consistent multi-user database.
- 3) Soil survey codes should correspond to GIS specifications.
- 4) Create a better way to import non-Maricopa soil defaults.
- 5) If the program does not recognize a map unit, have DDMSW ask user to "fix" if a typo, add custom map unit, change to a different map unit.
- 6) User should be able to customize the final Kb value.
- 7) User should be able to mix Clark and S-Graph hydrographs.

## DDMSW Training Class

### **Exercise 1**

Create an existing conditions model for Major Basin 01 using the data given on page 2.

- 1) Establish a new project with Project ID, EX01
- 2) Manually input rainfall, soils, land use, sub basin and routing data into DDMSW.
- 3) Examine the warning messages generated when after updating the sub basin data. What changes, if any, should be made to the model?
- 4) Create a draft HEC-1 file, including routing cards. Export the draft HEC-1 model to a text file and edit using the default text editor. Add Combine cards (HC) as necessary according to the HEC-1 schematic diagram.
- 5) Run the HEC-1 model for all return periods and view the summary results.

### **Exercise 2**

Create a future conditions model for Major Basin 01 using the data given on page 3.

- 1) Note that most of the data does not change between existing and future conditions models. Rather than re-entering the data by hand, copy Exercise1 to a new project file with Project ID, FUT01.
- 2) Change the land uses by exporting the land use data to Excel, then importing the modified data back into the new project.
- 3) Update the HEC-1 model and rerun it for all return periods. View the summary results.

### **Exercise 3**

Import a DOS DDMS family for conversion to the DDMSW format.

**EXERCISE 1**

**MAJOR BASIN 01 - EXISTING (PRE-DEVELOPMENT) CONDITIONS**

Time-Area curve: Urban                      Routing method: Normal Depth  
 Design Storm: 100 year, 6 hour            Loss Method: Green & Ampt  
 Unit Hydrograph: Clark

**RAINFALL DATA**

Primary Zone: 7                                2yr / 6hr 1.30"            100 / 6 3.30"  
 Short Duration Zone: 8                      2yr / 24hr 1.50"           100 / 24 4.20"

**SUB BASIN PARAMETERS**


Sub Basin	Drainage Area [sq mi]	Length of Flow Path [mi]	Land Uses (Area / LU in sq. mi.)							
			USGE [ft]	DSGE [ft]	LDR	MDR	MFR	IND	COMM	ROW CROP
1A	1.14	0.75	2284	2195		1.14				
1B	1.34	1.02	2460	2200		1.01				0.34
1C	1.27	1.67	2400	2180	0.70					0.57
1D	0.81	1.11	2220	2035		0.20				0.61
1E	0.56	0.33	2400	2205				0.56		

Sub Basin	Map Unit (Area / MU in sq. mi.)						
	27	65	67	73	82	87	88
1A		0.23			0.34	0.57	
1B	0.34	0.20		0.13			0.67
1C			0.76		0.51		
1D			0.41				0.41
1E				0.56			

← MAP UNIT

**REACH ROUTE HYDRAULIC DATA**

Reach	Slope [ft/ft]	Length [ft]	Channel n value	LOB n value	ROB n value	Typical Channel Cross-section							
						sta	elev	elmax					
R1-2	0.001	1205	0.035	0.038	0.038	510	1510	1585	1596	1600	1612	1662	2262
R2-3	0.002	840	0.035	0.038	0.038	99.7	94.1	93.6	92.2	92.2	93.6	94.9	99.7
R3-4	0.005	750	0.035	0.038	0.038	99.7							

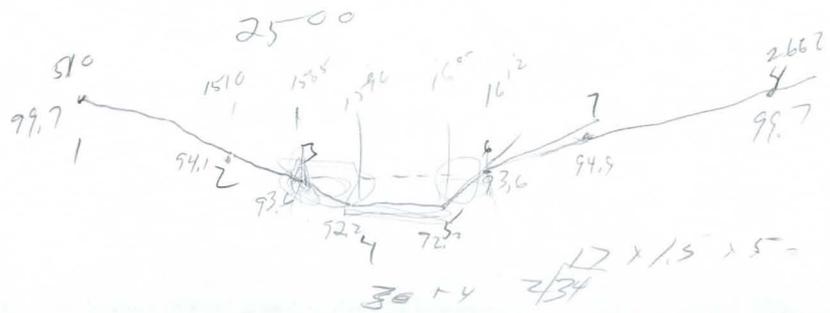





# FLOOD CONTROL DISTRICT OF MARICOPA COUNTY

PROJECT \_\_\_\_\_ PAGE \_\_\_\_ OF \_\_\_\_

DETAIL \_\_\_\_\_ COMPUTED \_\_\_\_\_ DATE \_\_\_\_\_

\_\_\_\_\_ CHECKED BY \_\_\_\_\_ DATE \_\_\_\_\_

## MAJOR BASIN 01

