



**EC-1**

**Erosion Control Mats Drawing**

ON SHALLOW SLOPES, STRIPS OF NETTING MAY BE APPLIED ACROSS THE SLOPE.

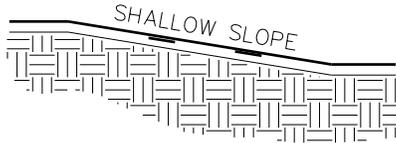


SECTION

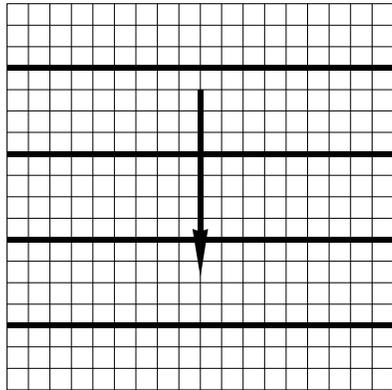


(SHALLOW SLOPES)  
PLAN

ON STEEP SLOPES, APPLY STRIPS OF NETTING PARALLEL TO THE DIRECTION OF FLOW AND ANCHOR SECURELY.

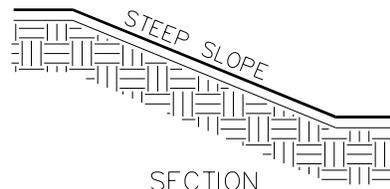


SECTION

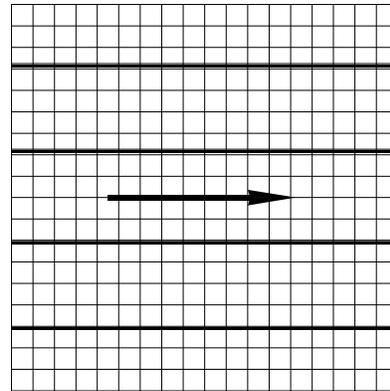


(STEEP SLOPE)  
PLAN

IN DITCHES, APPLY NETTING PARALLEL TO THE DIRECTION OF FLOW. USE CHECK SLOTS EVERY 15 FEET. DO NOT JOIN STRIPS IN THE CENTER OF THE DITCH.

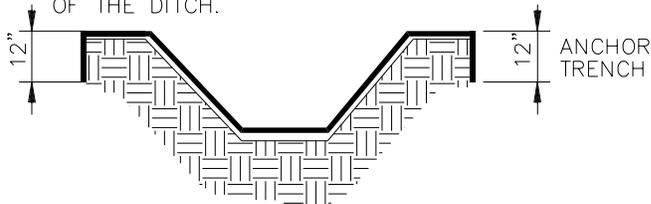


SECTION


FLOW

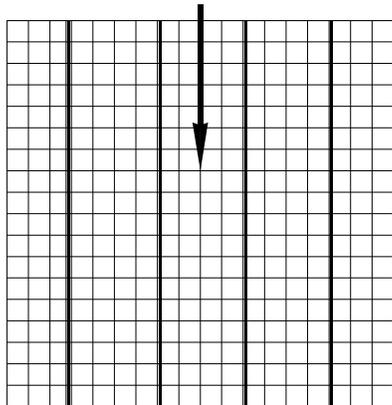

(DITCH)  
PLAN

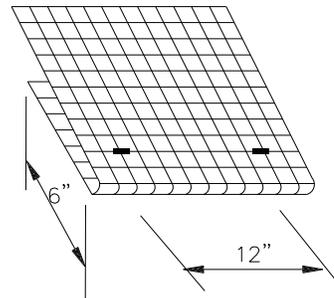

BRING NETTING DOWN TO A LEVEL BEFORE TERMINATING THE INSTALLATION. TURN THE END UNDER 6" AND STAPLE AT 12" INTERVALS.

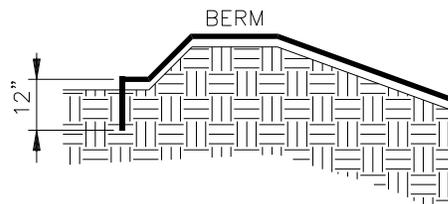

WHERE THERE IS A BERM AT THE TOP OF THE SLOPE, BRING THE MATTING OVER THE BERM AND ANCHOR IT BEHIND THE BERM WITH A 12" ANCHOR TRENCH.

**ORIENTATION OF NETTING AND MATTING**